




## BOX TRACK-Hanger Assembly Installation Details

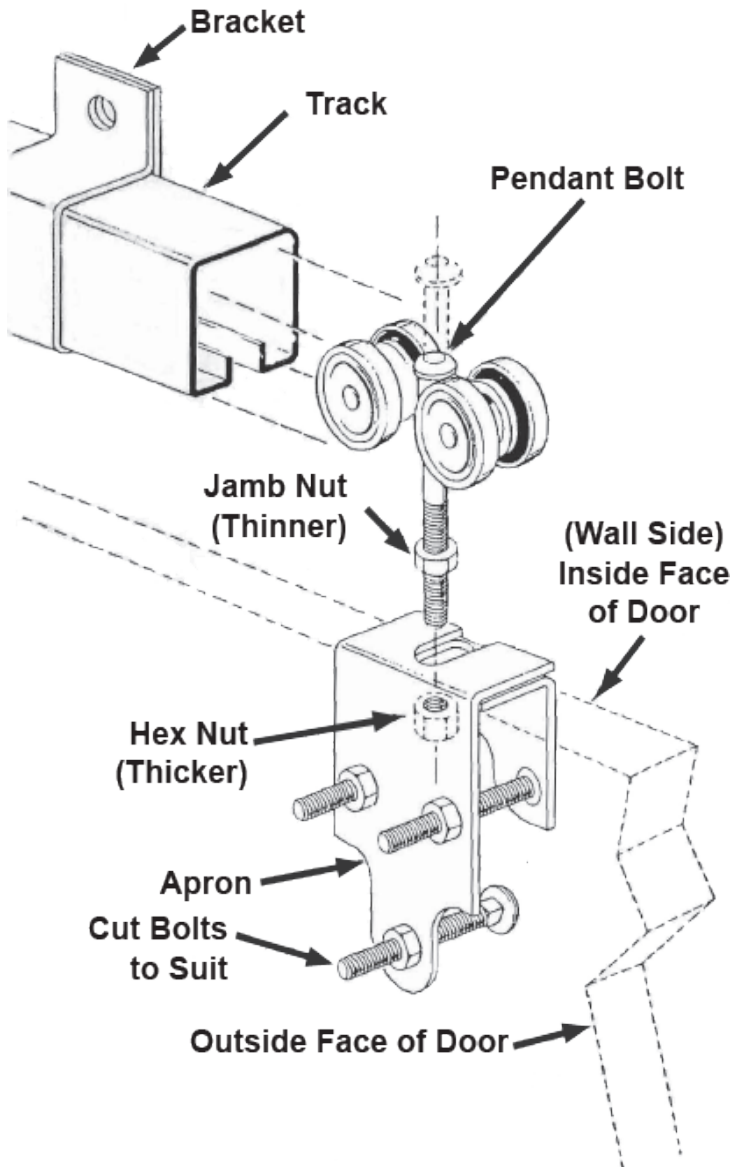

### Assembly Procedure:

#### A) HANGER

- 1) Take wheel frame assembly from box.
- 2) Insert pendant bolt into wheel frame assembly.
- 3) Thread jamb nut onto pendant bolt.
- 4) Insert finished wheel and pendant assembly through both apron plates - Hex nut located on the bottom side of the apron.
- 5) When locating hanger, figure "twice the width" of the apron to center of hanger.

#### B) APRON

- 1) Insert finished wheel and pendant assembly through both aprons as per diagram.
- 2) Locate the larger apron plate on the side opposite the opening and on the top of the smaller apron plate.
- 3) Thread (thicker) hex nut onto pendant bolt and tighten.
- 4) Locate hanger assembly on door. Drill top side of door to accommodate pendant bolt and nut. Attach apron with bolts provided. Be sure to locate bolt nuts away from door opening.

#### C) LUBRICATION

Wheel bearings should be lubricated annually or when necessary. (Lubrication Kit #0888.00324)

**\*Note: Aprons are not needed on steel doors if properly reinforced and threading made available.**