


1

## Elevation View: Door Folds Towards



**CROWN  
INDUSTRIAL**  
So. San Francisco, Ca  
(650) 952-5150  
www.crown-industrial.com

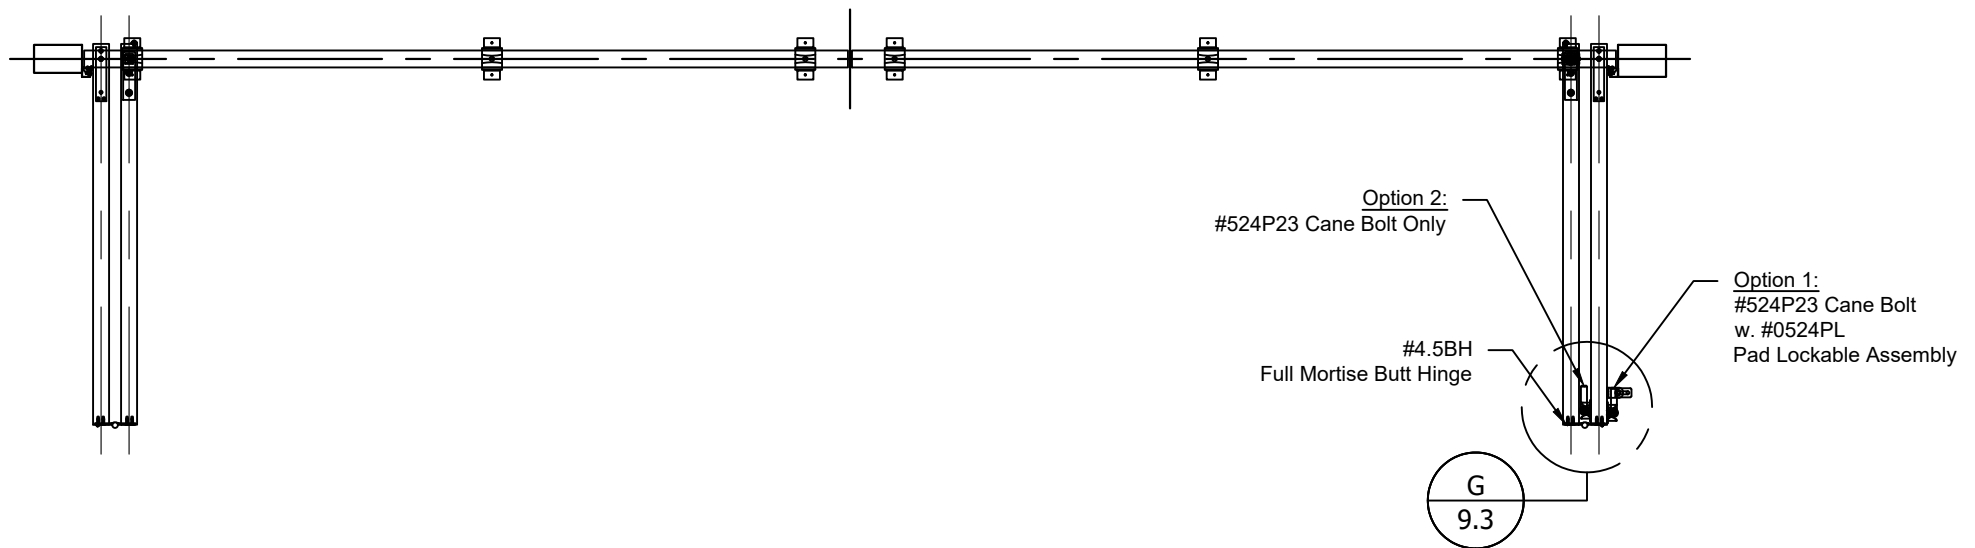


3

## Plan View: Overhead Mount, Doors In Open Position




REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED

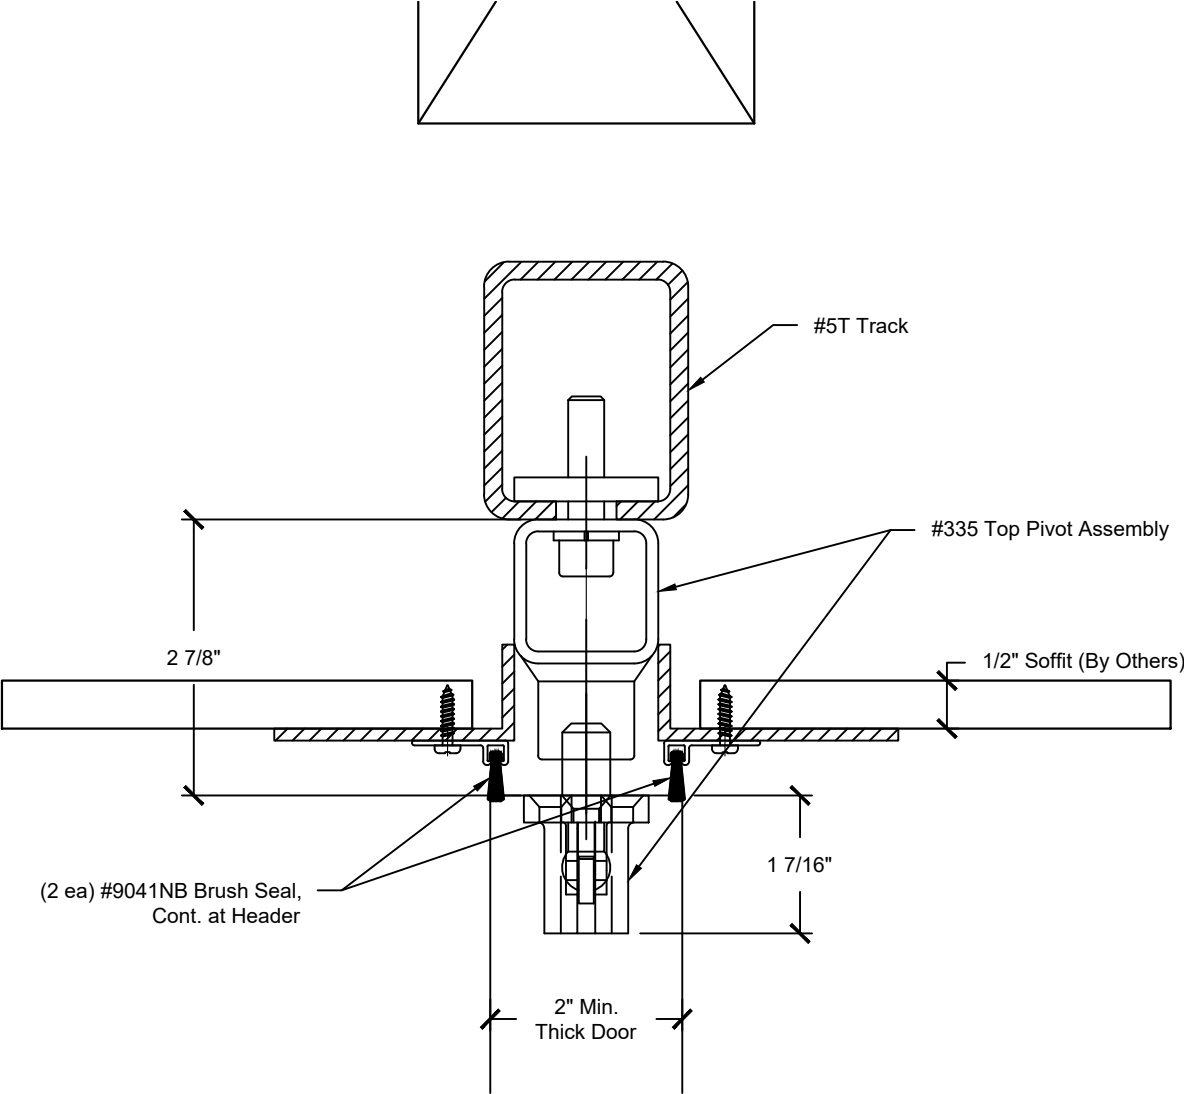

**A** Head Section Detail @ Pivot  
Scale: 6" = 1'-0"

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED

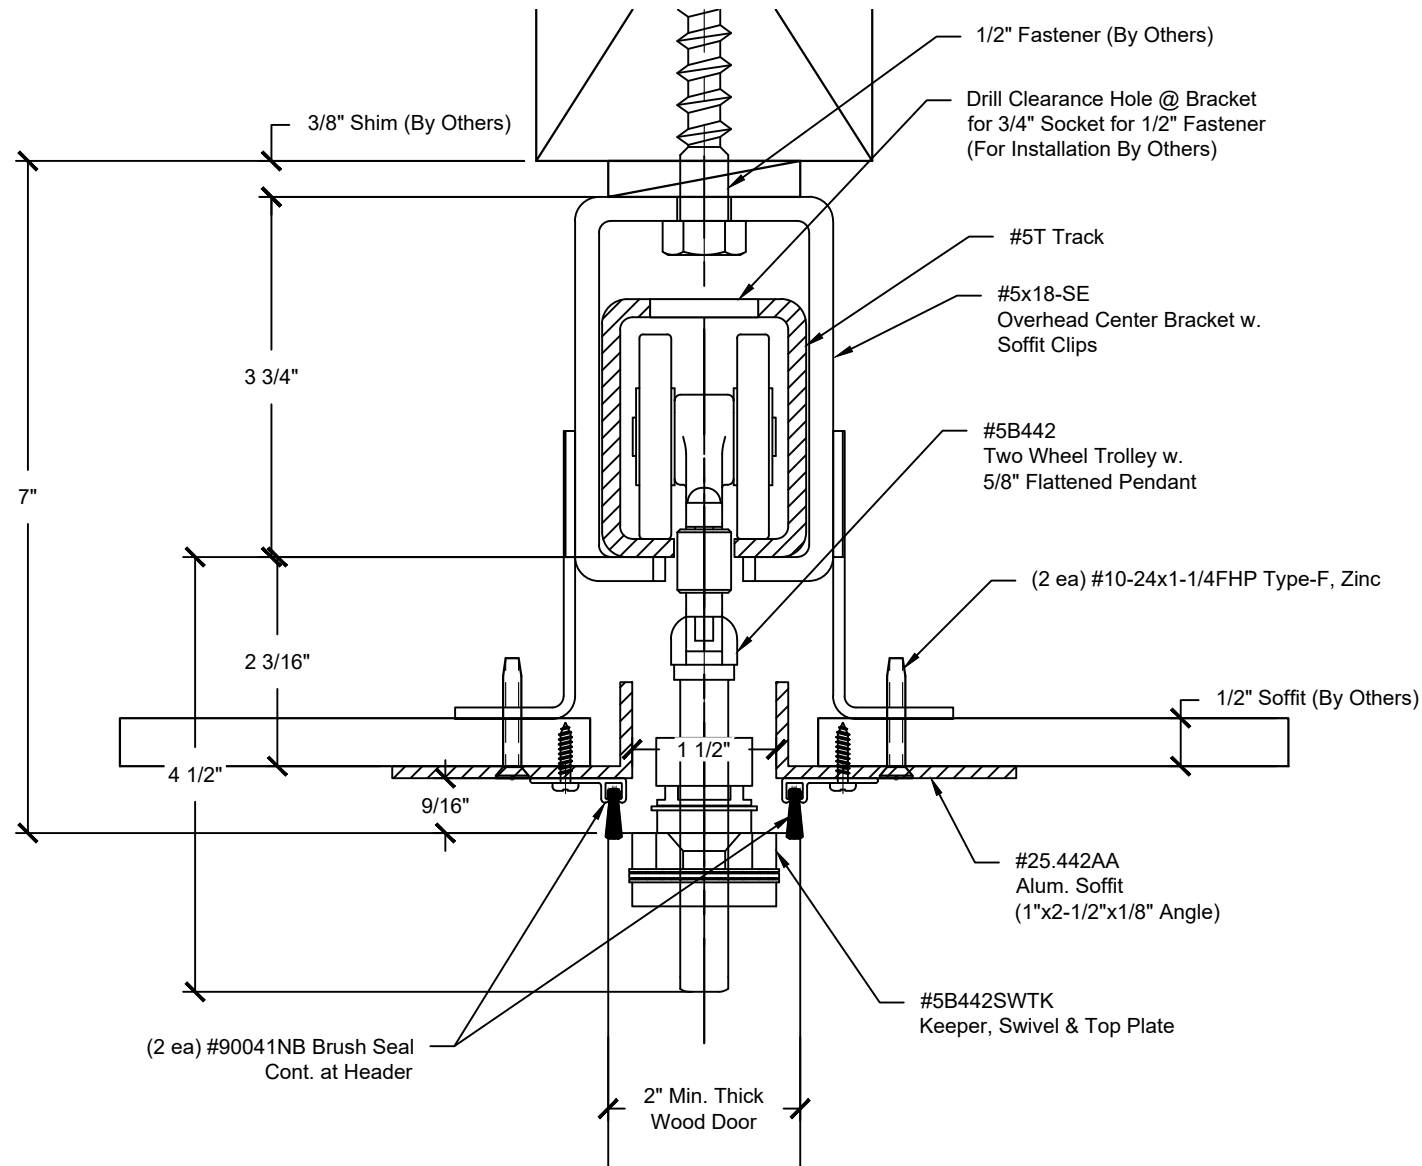


**B** Head Section Detail @ Trolley  
Scale: 6" = 1'-0"




**CROWN  
INDUSTRIAL**  
So. San Francisco, Ca  
(650) 952-5150  
www.crown-industrial.com

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED

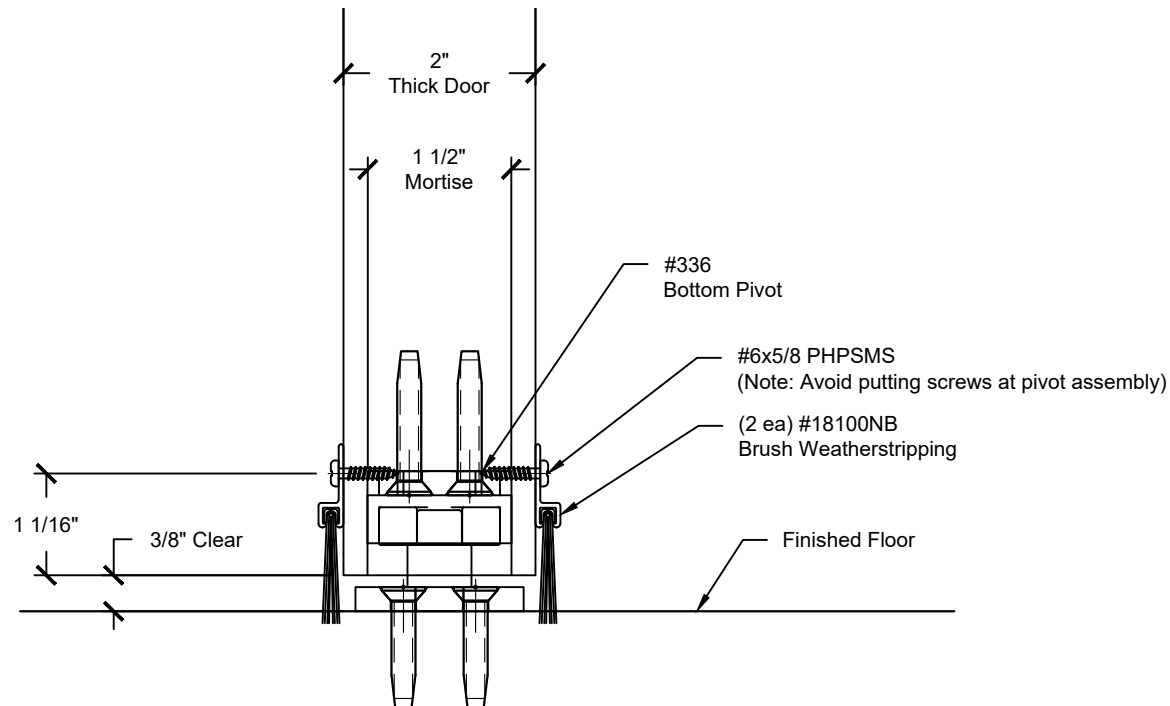


**C Sill Detail @ Pivot**  
Scale: 6" = 1'-0"

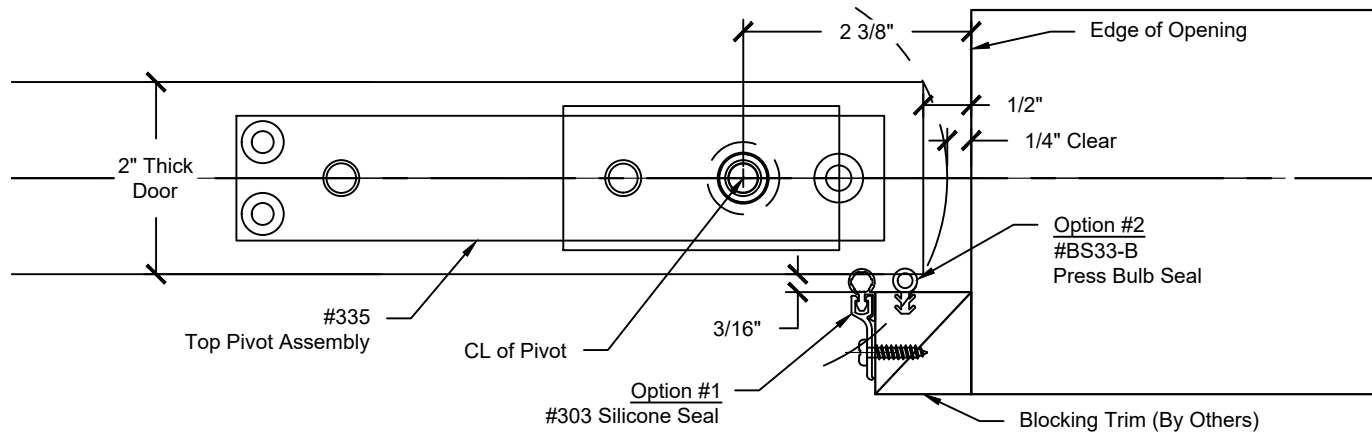

## D.1 Jamb Detail @ Pivot (Door Closed Position)

Scale: 6" = 1'-0"

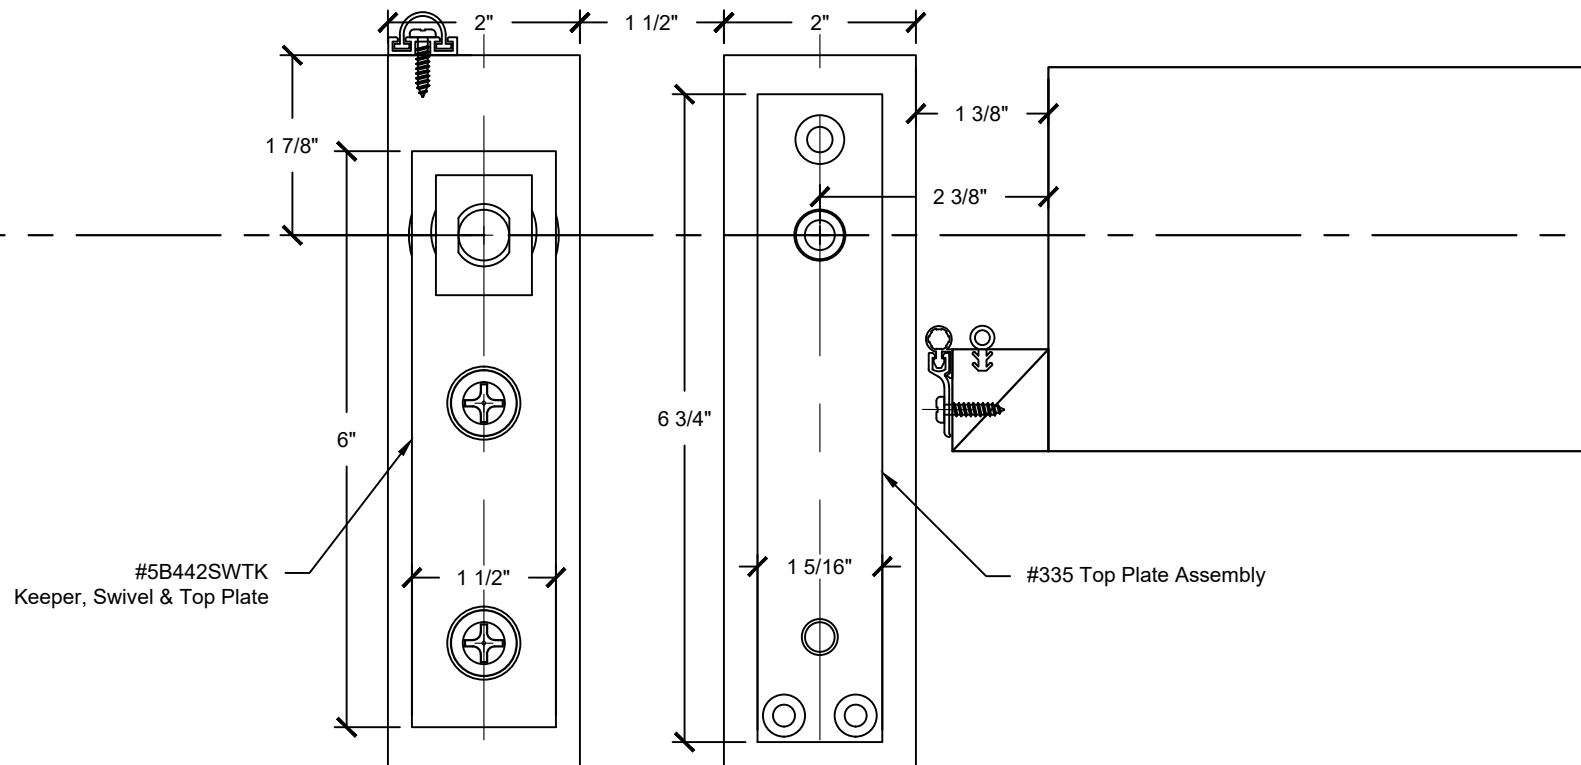


## D.2 Jamb Detail @ Pivot (Door Open Position)

Scale: 6" = 1'-0"




REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED

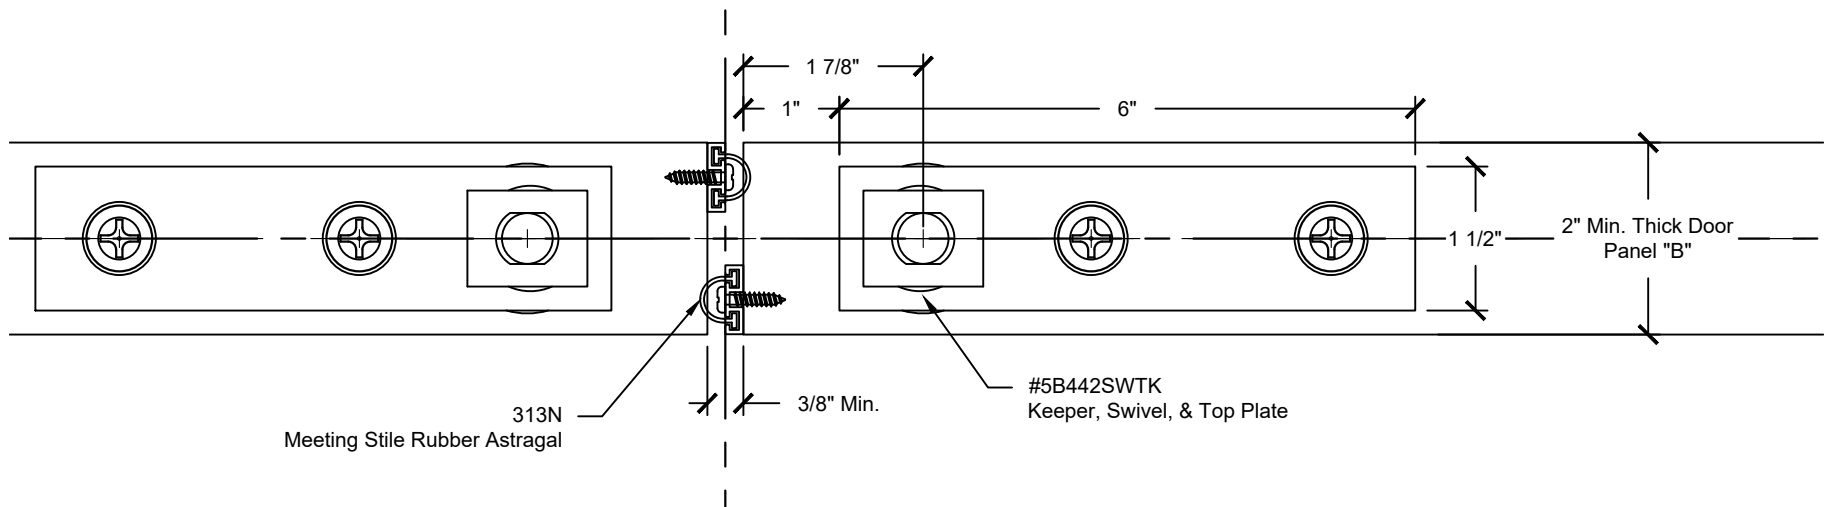

**E** Plan Section Detail @ Lead Edges of Door

Scale: 6" = 1'-0"

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED

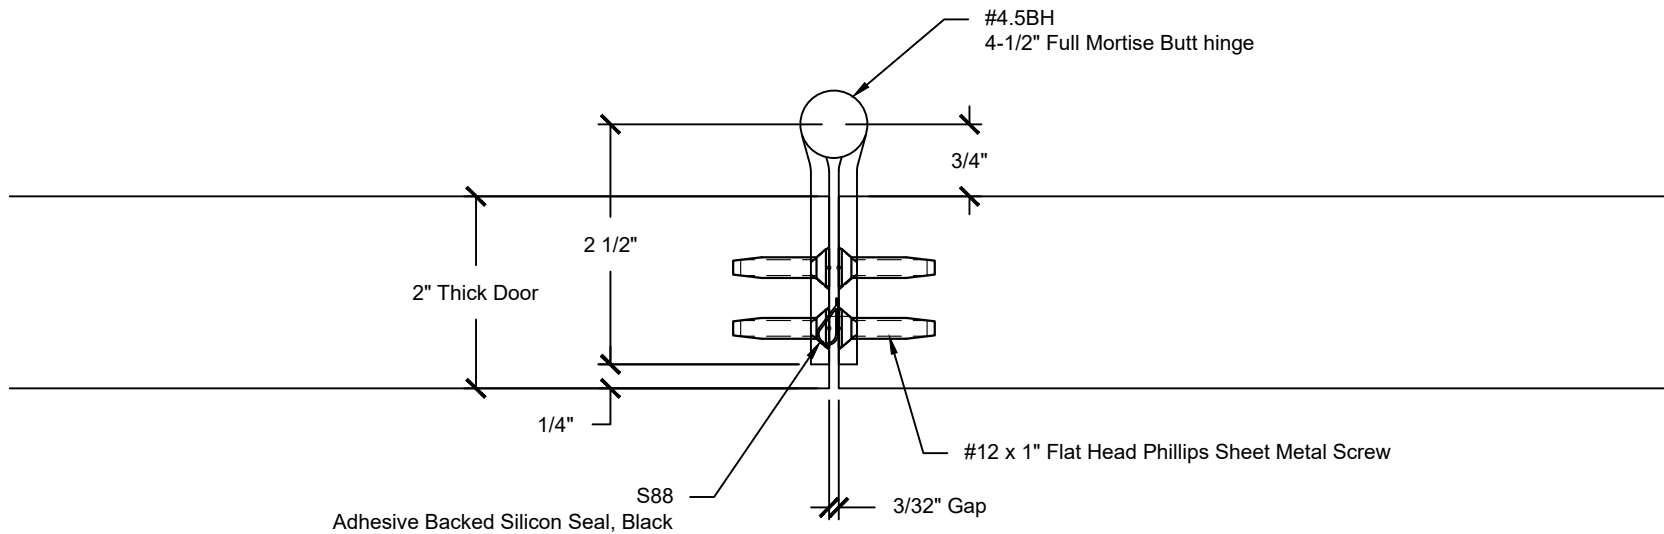

F

## Plan Section Detail @ Hinge


Scale: 6" = 1'-0"



**CROWN  
INDUSTRIAL**  
So. San Francisco, Ca  
(650) 952-5150  
www.crown-industrial.com



REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED

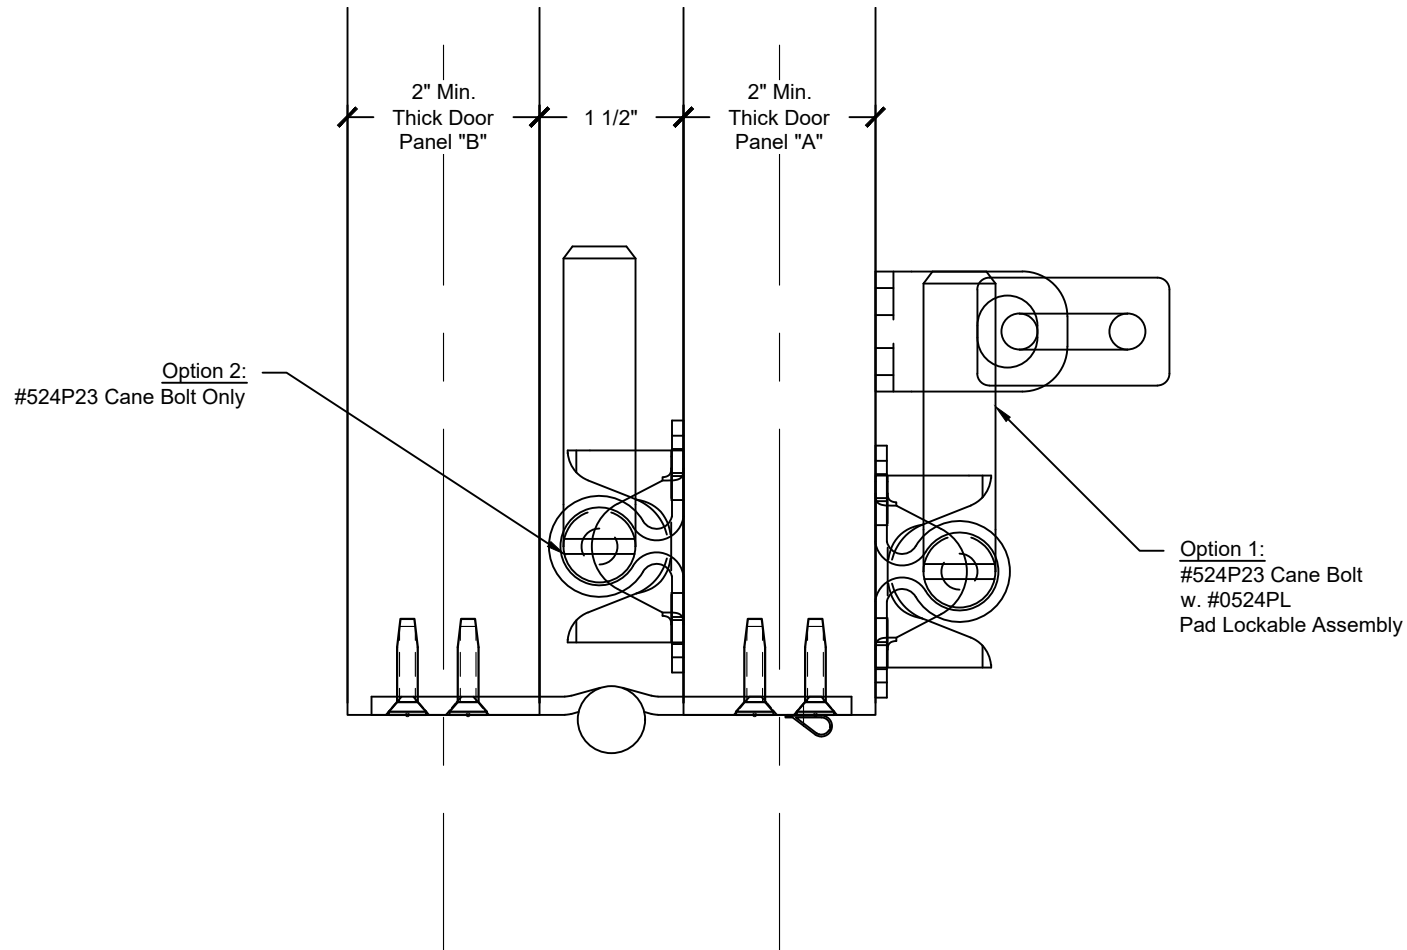

**G** Plan Section Detail @ Cane Bolt: Full Open Position

Scale: 6" = 1'-0"