

IXIO-DT1


Activation & safety sensor for automatic sliding doors



Download the BEA DECODER app for a quick overview of settings



DESCRIPTION

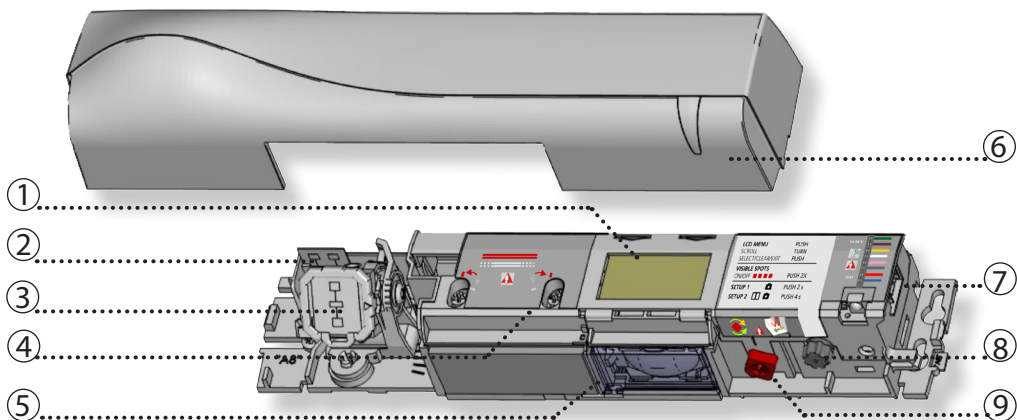


- | | |
|---------------------------------|--------------------------------------|
| 1. LCD | 6. cover |
| 2. radar antenna (narrow field) | 7. main connector |
| 3. radar antenna (wide field) | 8. main adjustment knob |
| 4. AIR-curtain width adjustment | 9. AIR-curtain angle adjustment knob |
| 5. AIR-lenses | |


ACCESSORIES




10IMB: Bracket accessory

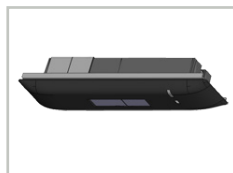


10ICA: Ceiling accessory

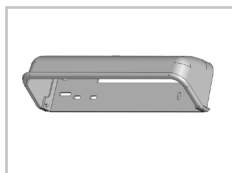


10IRA: Rain accessory

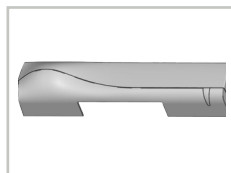

35.1286: black cover
35.1302: white cover
35.1303: silver cover

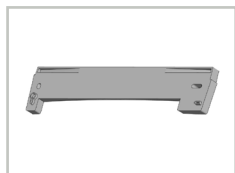




10CDA: Curved door accessory

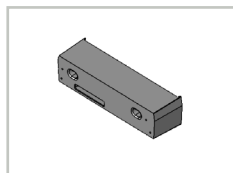

10XIOSPACER: Spacer

READ BEFORE BEGINNING INSTALLATION/PROGRAMMING/SET-UP


LED-SIGNAL

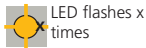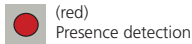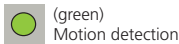


INSTALLATION




The sensor should be mounted securely to avoid extreme vibrations.

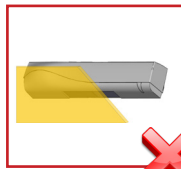

Do not cover the sensor.

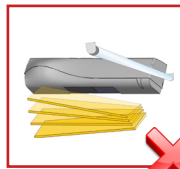


Avoid moving objects and light sources in the detection field.

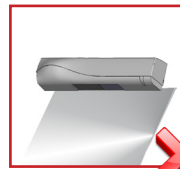

Avoid highly reflective objects in the infrared field.

MAINTENANCE

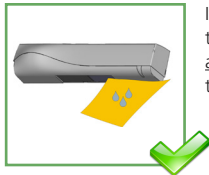


It is recommended to clean the optical parts at least once a year or more if required due to environmental conditions.



Do not use aggressive products to clean the optical parts.


SAFETY

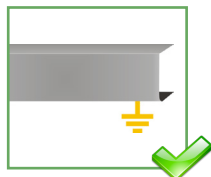


The door control unit and the header cover profile must be correctly grounded.



Only trained and qualified personnel are recommended for installation and set-up of the sensor.

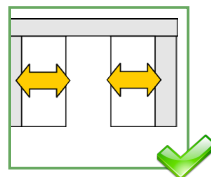

Following installation, always test for proper operation (according to ANSI 156.10) before leaving the premises.

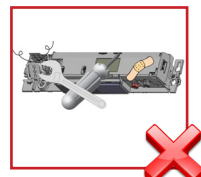


The warranty is invalid if unauthorized repairs are made or attempted by unauthorized personnel.


READ BEFORE BEGINNING INSTALLATION/PROGRAMMING/SET-UP

HOW TO USE THE LCD


DISPLAY DURING NORMAL FUNCTIONING

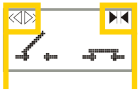

Activation impulse Safety

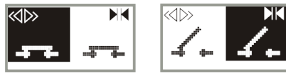

Negative display = active output

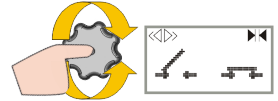

To adjust contrast, push and turn the grey button simultaneously.
During normal function only.

FACTORY VALUE VS. SAVED VALUE



displayed value = factory value



displayed value = saved value

NAVIGATING IN MENUS



Push to enter the LCD menu



Enter password if necessary
Not during the first minute after power-on of the sensor.




Select your language before entering the first LCD menu.
During the first 30 seconds after power-on of the sensor or later in the diagnostics menu.



Scroll menu items



Select **Back** to return to previous menu or display.

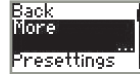

Select **More** to go to next level:
- basic settings (MENU 1)
- advanced settings (MENU 2)
- diagnostics (MENU 3)



CHANGING A VALUE



Scroll menu up/down




Push to select parameter



current value is displayed



Scroll values up/down

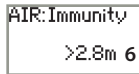

more values are displayed






Push to save new value



new value is displayed

CHANGING A ZIP CODE

See application note on ZIP CODE (76.0024)

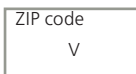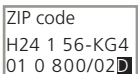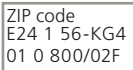


Validate the last digit in order to activate the new ZIP code:

- v = valid ZIP code (values will be changed accordingly)
- x = invalid ZIP code (no values will be changed)
- v/x = valid ZIP code, but from a different product

only available values will be changed

VALUE CHECK WITH REMOTE CONTROL

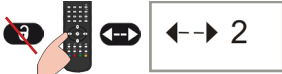


Pressing a parameter symbol on your remote control displays the saved value directly on the LCD screen. Do not unlock first.


1 MOUNTING & WIRING

Use the provided mounting template and mount the sensor, ensuring that the bottom of the sensor is within 2 inches of the bottom of the door header.

Route the harness using the harness clip as shown in the exploded view of the mounting illustration.

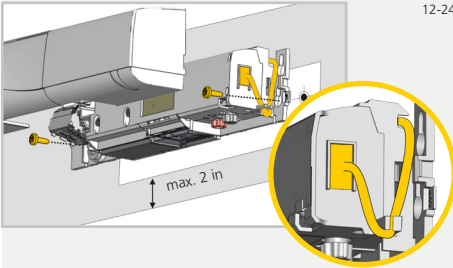

12-24 V AC, 50/60 Hz
12-30 V DC
Max 2.5 W

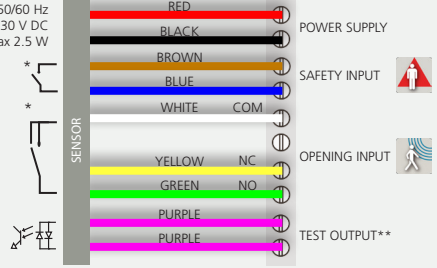

* Output status when sensor is operational.

** The sensor LED will briefly flash RED during monitoring communication with door control. This indicates that external monitoring is functional. Monitoring functionality must be active on the sensor and monitoring wires must be properly connected to the door control.

Mounting is compatible with the WIZARD.

Sensor connectivity (power and relays) must utilize only the supplied harness.

Sensor power must be supplied from a Class 2 supply source limited to 15 W.


Sensor is intended to be monitored for proper operation by the door operator or system.

Harness shall be routed separated from any Mains or non-Class 2 voltage cable for correct operation or shall be rated for the Mains voltage, and suitable protection and routing means shall be used according to National and Local Codes to prevent damage to the harness.

2 RADAR OPENING IMPULSE FIELD


The size of the detection field varies according to the mounting height of the sensor.

The following graphics are representations - not default settings.

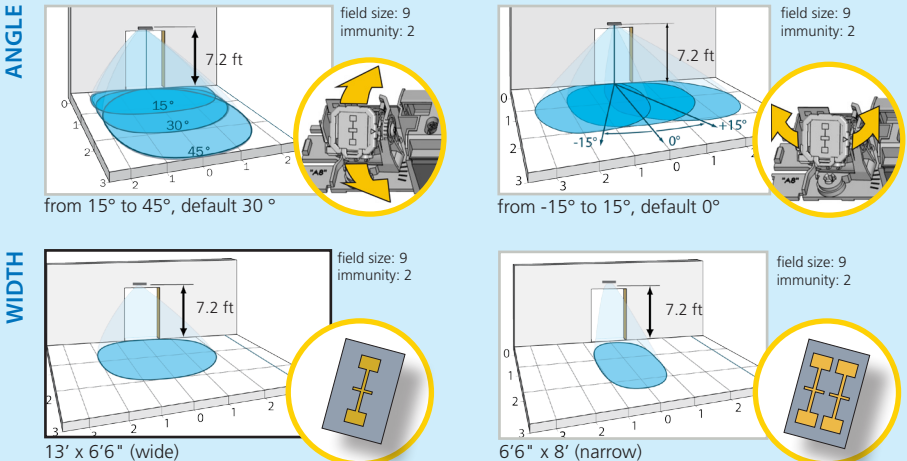

1 x 1 grid is approximately 3.28 ft x 3.28 ft.


3 INFRARED SAFETY FIELD

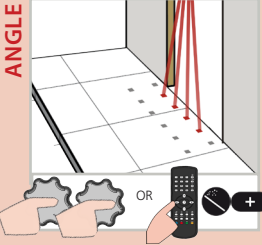


Activate the visible* spots to verify the position of the AIR-curtain.

* Visibility depends on external conditions. When spots are not visible, use the Spotfinder to locate the curtains.


** The distance between the inner curtain of the inside door sensor and the inner curtain of the outside door sensor should always be smaller than 8 in.

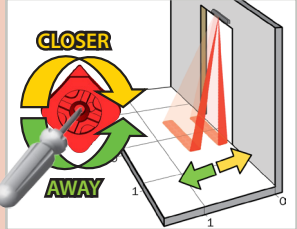


If necessary, adjust the AIR-curtain angle (from -7° to 4° , default 0°).

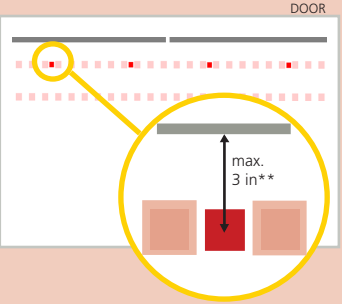

WIDTH

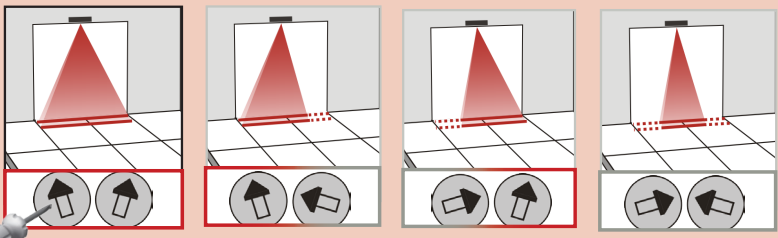

Part of the detection field can be masked to reduce its width. The arrow position determines the width of the detection field.

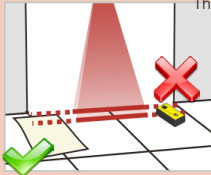

Additional adjustments are possible by LCD or remote control (see OVERVIEW OF SETTINGS).

Mounting height	Detection width
6' 6"	6' 6"
7' 3/16"	7' 3/16"
8' 3/16"	8' 3/16"
9' 13/16"	9' 13/16"
11' 6"	11' 6"

The size of the detection field varies according to the mounting height and the settings of the sensor.

The full door width must be covered.

Always verify the actual detection field width by walk-testing according to ANSI 156.10 guidance.

4 SET-UP

⚠ STEP OUT OF THE INFRARED FIELD!

SET-UP 1 (QUICK)

reference picture

either hold the knob for 2 seconds, or use the remote control buttons as specified



SET-UP 2 (ASSISTED)

test of full door cycle + reference picture

either hold the knob for 4 seconds, or use the remote control buttons as specified



⚠ TEST THE PROPER OPERATION OF THE INSTALLATION BEFORE LEAVING THE PREMISES!

OVERVIEW OF SETTINGS



BASIC

ADVANCED

DIAGNOSTICS

	0	1	2	3	4	5	6	7	8	9		
Back More	[Navigation icons]											
RAD: FIELD SIZE	small	>	>	>	>	>	>	>	>	large	[Navigation icons]	
AIR: WIDTH	[Screwdriver icon]		[Screwdriver icon]		[Screwdriver icon]		[Screwdriver icon]		[Screwdriver icon]		Always additionally adjust the arrow position on the sensor with a screwdriver.	
AIR: OUTPUT	DeEner/NO Energ/NC	Energ/NC DeEner/NO	Energ/NC DeEner/NO	DeEner/NO DeEner/NO							DeEner: De-Energized relay Energ: Energized relay NO: normally open NC: normally closed	
TEST	off	on	The sensor LED will briefly flash RED during monitoring communication with door control. This indicates that external monitoring is functional. Monitoring functionality must be active on the sensor and monitoring wires must be properly connected to the door control.									[Navigation icons]
More Back Back More	[Navigation icons]											
RAD: FIELD SIZE	small	>	>	>	>	>	>	>	>	large	[Navigation icons]	
RAD: IMMUNITY		low	>	>	>	>	>	>	>	high	[Navigation icons]	
RAD: DIRECTION	off	bi	uni	uni MTF							MTF: motion tracking feature	
RAD: HOLD TIME	0.5 s	1 s	2 s	3 s	4 s	5 s	6 s	7 s	8 s	9 s	[Navigation icons]	
RAD: REENTRY	small	>	>	>	>	>	>	>	>	large	[Navigation icons]	
RAD: OUTPUT	DeEner/NO Energ/NC	Energ/NC DeEner/NO	Energ/NC DeEner/NO	DeEner/NO DeEner/NO							DeEner: De-Energized relay Energ: Energized relay NO: normally open NC: normally closed	
AIR: IMMUNITY		normal	enhanced							mode B	[Navigation icons]	
AIR: WIDTH	[Screwdriver icon]		[Screwdriver icon]		[Screwdriver icon]		[Screwdriver icon]		[Screwdriver icon]		Always additionally adjust the arrow position on the sensor with a screwdriver.	
AIR: NUMBER		1	2									[Navigation icons]
AIR: PRESENCE TIME		30 s	1 min	2 min	5 min	10 min	20 min	60 min	infinte	min. value for DIN18650: 1 min min. value for EN16005: 30 s	[Navigation icons]	
AIR: FREQ		A	B									[Navigation icons]
AIR: OUTPUT	DeEner/NO Energ/NC	Energ/NC DeEner/NO	Energ/NC DeEner/NO	DeEner/NO DeEner/NO							DeEner: De-Energized relay Energ: Energized relay NO: normally open NC: normally closed	
TEST	off	on	The sensor LED will briefly flash RED during monitoring communication with door control. This indicates that external monitoring is functional. Monitoring functionality must be active on the sensor and monitoring wires must be properly connected to the door control.									[Navigation icons]
REDIRECTION	motion	motion or presence									opening output is active in case of: 0 motion detection 1 motion or presence detection 2 motion and presence detection	[Navigation icons]
FACTORY RESET									full reset	partial reset	partial: outputs are not reset	[Navigation icons]

More Back
Back

factory value

ZIP CODE *all parameter settings in zipped format (see application note on ZIP CODE – 76.0024) unique ID-number*

ID # *unique ID-number*

CONFIG P/N










SOFT P/N

ERROR LOG *last 10 errors + day indication*

AIR: SPOTVIEW *view of spot(s) that trigger detection*




- AIR: C1 ENERG *signal amplitude received on curtain 1*
- AIR: C2 ENERG *signal amplitude received on curtain 2*
- POWERSUPPLY *supply voltage at power connector*
- OPERATINGTIME *power duration since first startup*
- RESET LOG *delete all saved errors*
- PASSWORD *LCD and remote control password (0000= no password)*
- ADMIN *enter code to access admin mode*

TROUBLESHOOTING

E1	 ORANGE LED flashes 1x.	The sensor signals an internal fault.	Replace sensor.
E2	 ORANGE LED flashes 2x.	The power supply voltage is too low/high.	Check power supply voltage in diagnostics menu (menu 3) of the LCD. Check wiring.
E4	 ORANGE LED flashes 4x.	The sensor does not receive enough AIR-energy.	Decrease the angle of the AIR-curtains. Increase the AIR-immunity filter. Deactivate 1 curtain.
E5	 ORANGE LED flashes 5x.	The sensor receives too much AIR-energy. The sensor is disturbed by external elements.	Slightly increase the angle of the AIR-curtains. Decrease the AIR-immunity filter. Eliminate the cause of disturbance (lamps, rain cover, door controller housing properly grounded).
E8	 ORANGE LED flashes 8x.	IR power emitter is faulty.	Replace sensor.
	 ORANGE LED is on.	The sensor encounters a memory problem.	Cut and restore power supply. If ORANGE LED illuminates again, replace the sensor.
	 RED LED flashes quickly after an assisted set-up	The sensor sees the door during assisted set-up.	Move the AIR-curtains away from the door. Install the sensor as close to the door as possible. If needed, use a bracket assembly. Ensure that the bottom of the sensor is mounted within 2" of the bottom of the door header. Launch a new assisted set-up.
	 RED LED illuminates sporadically.	The sensor vibrates. The sensor sees the door. The sensor is disturbed by external conditions.	Check if the sensor is fastened firmly. Check position of cable and cover. Adjust the IR angle and launch an assisted set-up. Increase the AIR-immunity filter.
	 GREEN LED illuminates sporadically.	The sensor is disturbed by rain and/or leaves. Ghosting created by door movement. The sensor vibrates. The sensor sees the door or other moving objects.	Increase radar-immunity filter. Change radar field angle. Check if the sensor and door cover is fastened firmly. Check position of cable and cover. Remove the objects if possible. Change radar field size or angle.

troubleshooting continues on the next page

TROUBLESHOOTING (cont.)

	The LED and the LCD displays are off.	No power to sensor.	Check wiring.
	The reaction of the door does not correspond with the LED signal.	Incorrect output configuration / wiring.	Check for correct power supply.
	The LCD or remote control does not react.	The sensor is protected by a password.	Check output configuration setting.
	Visible External Monitoring / Test Indication LED (red) does not flash.	Monitoring installation/set-up error.	Check wiring.
		Sensor and/or wiring malfunction.	Enter the correct password. If you forgot the code, cut and restore the power supply to access the sensor without entering a password during 1 minute.
			Verify door control is capable of monitoring and the sensor monitoring wires are properly connected to the door control.
			Verify monitoring (TEST) is on in the sensor settings.
			Verify that there are no breaks anywhere in the wire harness.
			Replace the sensor.

- IXIO sensors are intended to be used with pedestrian sliding door systems.
- This device can be expected to comply with Part 15 of the FCC Rules, provided it is assembled in exact accordance with the instructions provided with this kit. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

TECHNICAL SPECIFICATIONS

Supply voltage:	12 – 24 VAC ±10% 12 – 30 VDC ±10%	<i>to be operated from SELV-compatible power supplies only</i>
Power consumption:	< 2.5 W	
Mounting height:	6'6" – 11'6"	<i>local regulations may impact acceptable mounting height</i>
Temperature range:	Sensor: -13 – 131 °F * 0 – 95% relative humidity, non-condensing	<i>LCD screen is operational from 14 – 131 °F. The sensor may still be programmed in colder temperatures, but with the remote control.</i>
Degree of protection:	IP54	
Noise:	< 70 dB	
Applicable directives:	R&TTE 1999/5/EC MD 2006/42/EC LVD 2006/95/EC ROHS 2 2011/65/EU	



Detection mode:	MOTION minimum detection speed: 2 in/s	PRESENSE typical response time: < 200 ms (max: 500 ms)
Technology:	Microwave doppler radar Transmitter frequency: 24.150 GHz Transmitter radiated power: < 20 dBm EIRP Transmitter power density: < 5 mW/cm ²	Active infrared with background analysis Spot: 2" x 2" (typ) Number of spots: max. 24 per curtain Number of curtains: 2
Output:	Electro-mechanical-relay (potential and polarity free) Max. contact current: 1 A Max. contact voltage: 30 VDC Adjustable Holdtime: 0.5 – 9 s	Solid-state-relay (potential and polarity free) Max. contact current: 400 mA Max. contact voltage: 42 VAC / VDC Holdtime: 0.3 – 1 s
Test/Monitoring input:		Sensitivity: Low: < 1 V High: > 10 V (max. 30 V) Response time on test request: typical < 5 ms
Norm conformity:		EN 12978 EN ISO 13849-1:2008 PL «C» CAT. 2 (under the condition that the door control system monitors the sensor at least once per door cycle) IEC 61496-1:2012 ESPE Type 2 EN 16005:2012 Chapter 4.6.8 DIN 18650-1:2010 Chapter 5.7.4 BS 7036-1:1996 Chapter 8.1

*Specifications are subject to change without prior notice.
All values measured in specific conditions.*

BEA INSTALLATION/SERVICE COMPLIANCE EXPECTATIONS

BEA, the sensor manufacturer, cannot be held responsible for incorrect installations or inappropriate adjustments of the sensor/device; therefore, BEA does not guarantee any use of the sensor outside of its intended purpose.

BEA strongly recommends that installation and service technicians be AAADM-certified for pedestrian doors, IDA-certified for doors/gates, and factory-trained for the type of door/gate system.

Installers and service personnel are responsible for executing a risk assessment following each installation/service performed, ensuring that the sensor system installation is compliant with local, national, and international regulations, codes, and standards.

Once installation or service work is complete, a safety inspection of the door/gate shall be performed per the door/gate manufacturer recommendations and/or per AAADM/ANSI/DASMA guidelines (where applicable) for best industry practices. Safety inspections must be performed during each service call – examples of these safety inspections can be found on an AAADM safety information label (e.g. ANSI/DASMA 102, ANSI/DASMA 107, UL 325).

Verify that all appropriate industry signage and warning labels are in place.



BEA hereby declares that the IXIO-DT1 is in conformity with the basic requirements and the other relevant provisions of the directives 1999/5/EC, 2006/95/EC and 2006/42/EC.

Notified Body for EC-type inspection: 0044 - TÜV NORD CERT GmbH, Langemarkstr. 20, D-45141 Essen

EC-type examination certificate number: 44 205 12 405836-001

Angleur, October 2014 Pierre Gardier, authorized representative and responsible for technical documentation

The complete declaration of conformity is available on our website: www.bea-pedestrian.be

Only for EC countries: According to the European Guideline 2012/19/EU for Waste Electrical and Electronic Equipment (WEEE)

